



Best Living Systems

KHAOS™



Powered with MCI™ (Multi-Cluster Ionization)

Owner's Manual

Please read Owner's Manual before installation or operation.

www.BestLivingSystems.com

Welcome

Thank you for your purchase of KHAOS, featuring MCI™ (Multi-Cluster Ionization) Technology. KHAOS is designed to keep the air and surfaces clean of bacteria, mold and viruses while improving indoor air quality. Dealing with pollutants in a proactive way, the KHAOS w/MCI™ uses HEPA-grade filtration and produces aggressive ionized oxidizers with MCI™ (multi-cluster ionization) distributed throughout the home or office to purify, protect, and prevent. Multiple technologies work synergistically together to result in a cleaner, safer, and healthier indoor environment.

This trademarked MCI™ (Multi-Cluster Ionization) Technology, using an enhanced ionization output, represents the newest generation of proactive air purification, is completely safe, unlike high levels of ozone, and effectively destroys mold, mildew, bacteria, viruses, odors, volatile organic compounds (VOCs) and the odors associated with them in the air and on surfaces.

Package Contents

- 1 KHAOS Unit with HEPA Filter
- 1 Set of MERV Filters
- 1 Power Cord

Warnings



Use this unit only in a manner intended by the manufacturer



Use proper AC plug and step-down transformer as required



Do not pull out by power cord or handle power plug when wet



Do not dismantle or repair as may void Warranty. Refer all repairs during warranty period to Distributor or Repair Center




Confirm no foreign material is on power plug before connecting with outlet



Components and Specification



Main Body

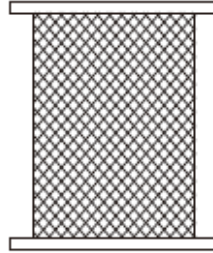

MCI™ HEPA Pro Filter



Adapter (DC24V)




Manual

	Stand Model
Model	KHAOS
DBI Cell	Dielectric Barrier Ionizer
UV Lamp	25-Watt UV LED Germicidal Lamp
Multi-layer filters w/catalyst	Hepa MERV16 + Carbon + Pre-filter @ *CADR 300 m ³ /hr
Size (mm and inch)	215(W) X 350(H)X 215(D) or 84.6”(W)x137.8”(H)x84.6”(D)
Weight (kg and lbs.)	2.5kg or 5.51lbs
Air Volume(CMH)	Max. 250 (Variable speed fan)
Power Input	DC 24V by 110W plug-in 50-60Hz 1A
WIFI	Cellphone App w/Upgrade



Structure

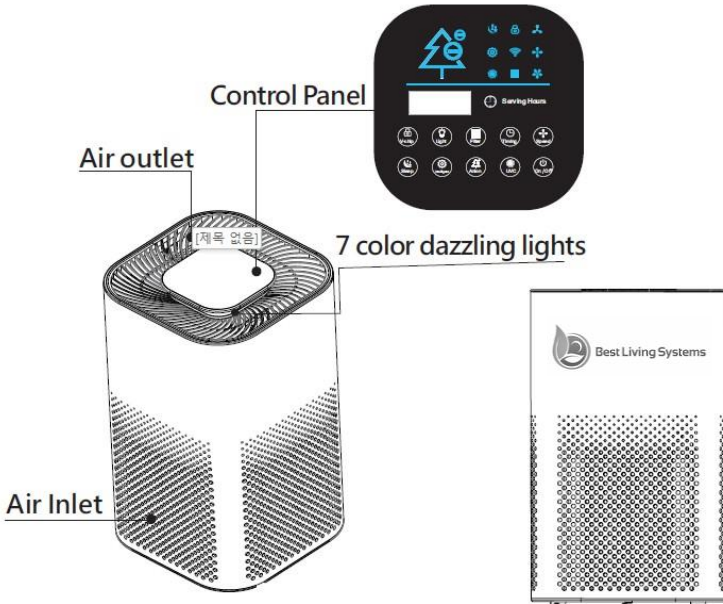


Bottom



3-Way KHAOS filter
Dust + Hepa 16 + Carbon w/PCO catalyst




Structure

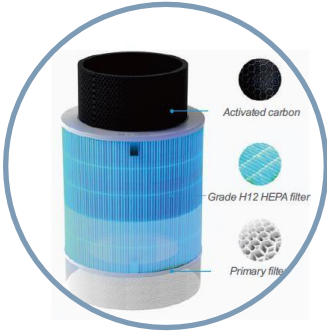


Dust + Hepa + Carbon



DBI Plasma Tube

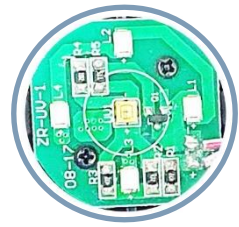


UV LED

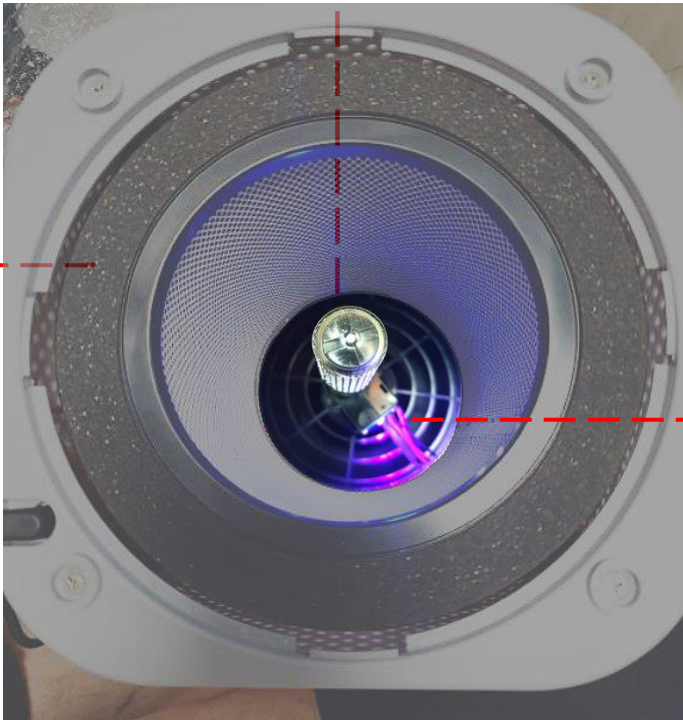




Operation


The filter is already installed on the product you purchased. Please remove the plastic bag from the filter according to the steps shown below before use. This may have already been removed, please verify.

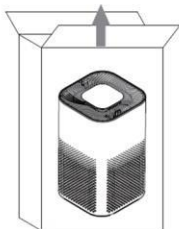


1. Open the outer packaging and take out the machine

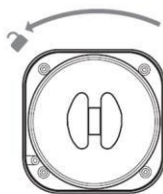


2. Turn the machine over, twist the bottom cover to the unlocking direction, and take out the packaged filter

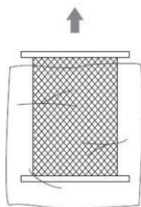


3. Remove the plastic bag and take the filter

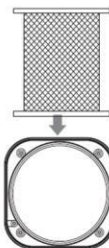


4. The filter is fixed on the bottom cover

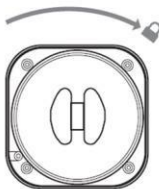

5. Close the bottom cover and twist to the lock direction

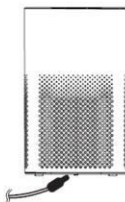

6. Plug the power adapter cord into the machine

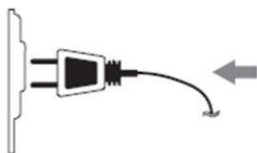

7. Plug the power adapter into the socket



8. Press the On/Off key to run the machine



Operation



WiFi (available w/upgrade)



Power on and off

Touch the Power Key to turn it on/off. The auto mode is entered by default after power-on and the indicator light of the corresponding icon is always on when the corresponding function is turned on after power-on. "____" is displayed in the digital area in the first 10s after power-on and the VOC value is displayed in real time after 10s.



UVC Sterilization (catalyst for PCO technology)

Touch the UVC key to turn on/off the UV sterilization function.



Dielectric Barrier Ionizer

Touch the Anion function key to turn on/off this function. DBI cell recycles on/off to eliminate ozone buildup.



Intelligent

Touch the Intelligent function key to enter the automatic mode and the fan speed will automatically change according to the VOC value.



Sleep mode

Touch the sleep function key to enter the sleep mode and the manual mode or automatic mode can be released at the same time. (In the sleep mode, the display is off, and only the indicator lamp corresponding to the sleep button is on). In the sleep mode, press any button to cancel the sleep mode and it enters the first fan speed mode.



Fan speed adjustment

Touch the wind speed key to release the automatic mode and enter the manual adjustment mode, select 1~5 speeds and the corresponding LED beads will light up.



Timer function

Touch the timer key to set the working time of the machine, from 1-24h, off, and cycle selection. When the timing function is on, the indicator light is on.



HEPA w/catalyst

When the cumulative working time of 2000h are detected the filter icon lights up. At this time press and hold the filter button for 5 seconds to reset after cleaning or replacing with new filter



LED light

Touch the light key to select light color



V-Chip mode

Press V-Chip button to turn on the key screen lock screen state. In the V-Chip state, pressing all the keys will prompt two short beeps to indicate that the function keys are locked. Press for 3 seconds to release the child lock, or power off and restart.



Discharge Tube Cleaning




In order to keep the efficiency of the tube, it is recommended to clean it every 6 months.



It is mandatory to use the machine with filter in order to protect eyes from UVC led light

Directions

1. Turn off the machine and unplug it before maintenance.
2. Turn the bottom cover counterclockwise to open it.
3. Take out the filter and clean it with a vacuum cleaner
4. Remove the DBI plasma tube. (Push the tube and turn it 90 degrees and take it out.)
5. Carefully remove the mesh from the tube.
6. Clean the tube with wet tissue and dry it with dry tissue.
7. Use brush to take off the dust from the mesh.
8. Assemble it in reverse order.

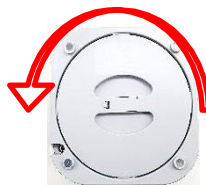


4:

5:

6:

7:

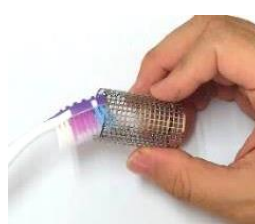

Warranty Certificate

www.BLSWarranty.com (register enhanced warranty program)

Product Name		Warranty Period
Model		1 Year from Date of Purchase
Serial Number		
Purchase date		
Client Name		
Customer Address		
Customer Phone	TEL.	CELL

1. Troubles during normal operation will be covered as warranty free of charge, within warranty period.
2. Read operation manual carefully before contacting service center.
3. Service fee will be charged for following condition(s) in warranty period.
 - ▶ Trouble caused by improper operation, modification, or disassembly.
 - ▶ Trouble(s) caused by non-fulfillment of instructions in the manual.
4. Paid service can be provided for out of warranty period.
5. Submittal of this warranty is required for warranty service.
6. Warranty service is valid only in the territory of product purchased.
7. Warranty card will not be reissued.

Best Living Systems, LLC 1150
N. Museum Road, #105
Conway, AR 72032
800.728.7206



Warranty

Your KHAOS unit is warranted to be free from all defects in material and workmanship in normal use for a period of (1) year from date of purchase. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

Any damage or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Manual are not covered by this warranty. Likewise, any defects or damage caused by unauthorized service or the use of other than Genuine Best Living Systems parts are not covered. Best Living Systems, LLC. Will, at its option, repair or replace a defective KHAOS unit or part(s) for the KHAOS unit that is covered by this warranty. As a matter of warranty policy, Best Living Systems, LLC. Will not refund the customer's purchase price.

Obtaining Warranty Service

To obtain warranty service you must return the defective KHAOS unit or KHAOS parts along with proof of purchase to the Best Living Systems Authorized Service Center. All transportation charges on parts, or units, submitted under this Warranty shall be borne by purchaser. Unless this Warranty is expressly renewed or extended by Best Living Systems, LLC., any repaired or replaced part of unit shall be warranted to the original purchaser only for the length of the unexpired portion of the original warranty. For the location of the nearest Best Living Systems Authorized Service Center or for service information in the United States or Canada, please visit us online at: www.BLSWarranty.com

FURTHER LIMITATIONS AND EXCLUSIONS ARE AS FOLLOWS

Any warranty that may be implied in connection with your purchase or use of the KHAOS unit, including any warranty of merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Best Living Systems, LLC. be liable for any consequential or incidental damages you may incur in connection with your purchase or use of MCI™ OdorNeutralizer. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

REGISTRATION

Please register your new KHAOS unit within 10 days of purchase by visiting www.BLSWarranty.com. Registering your new Best Living Systems product entitles you to the most up-to-date Best Living Systems warranty and promotion information.



Best Living Systems

KHAOS



Powered with MCI™ (Multi-Cluster Ionization)